

Link do produktu: <https://cardsplitter.pl/antena-satelitarna-sky-70cm-zone-2-grafit-72x56-p-1842.html>



Antena satelitarna SKY 70cm zone 2 Grafit (72x56)

Cena	89,99 zł
Dostępność	Na zamówienie
Czas wysyłki	24 godziny
Numer katalogowy	SKY
Producent	Kemot

Opis produktu

Antena satelitarna SKY 70cm zone 2 Grafit (72x56)

**Ażurowa antena satelitarna - idealna w bardziej wietrzne regiony.
Dziurki w antenie powodują, że powierzchnia podlegająca
naporowi wiatru jest mniejsza niż w antenie pełnej.**

Solidnie wykonana angielska antena satelitarna,
posiadająca oryginalny i estetyczny wygląd.
Antena nadaje się do odbioru każdej telewizji satelitarnej
(**Telewizja N**, **Polsat**, **Cyfra +**, **N na kartę**, **NC+**),
gwarantuje stabilny obraz bez względu na warunki pogodowe.

[Instrukcja montażu anteny](#)



Uchwyt mocowania konwertera w zestawie.

Specyfikacja:

- Malowane proszkowo - stal ocynkowana perforowana
- Kolor: antracyt
- Regulacja azymutu / wysokości i LNB
- Współpracuje idealnie z konwerterami firmy Zinwell

-
- Zakres częstotliwości pracy: 10.7GHz - 12.75GHz
 - Zysk na 10.70GHz: ~ 35dBi
 - Zysk na 12.75GHz: ~ 37dBi
 - Kąt przesunięcia: 23,9 stopni
 - Zakres regulacji: 10-70 stopni







Parts List

Item	Description	Qty
1.	Antenna	1
2.	Antenna Bracket	1
3.	Elevation Bracket	1
4.	Feed Leg	1
5.	L Tube	1
6.	Wall Mount	1
7.	Fixing Kit	1

Not supplied in dish package: -
LNB, feed clamp and mounting button.

Fixing Kit

Item	Description	Qty
10.	M6 serrated flange nuts	17
11.	M6x12 painted Posi Pan	4
12.	M6x16 cup squares	4
13.	M6x40 Posi Pan Screw	1
14.	M6 U Bolt (43mm ctrs)	4

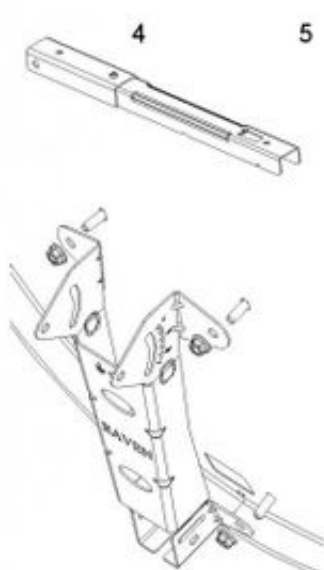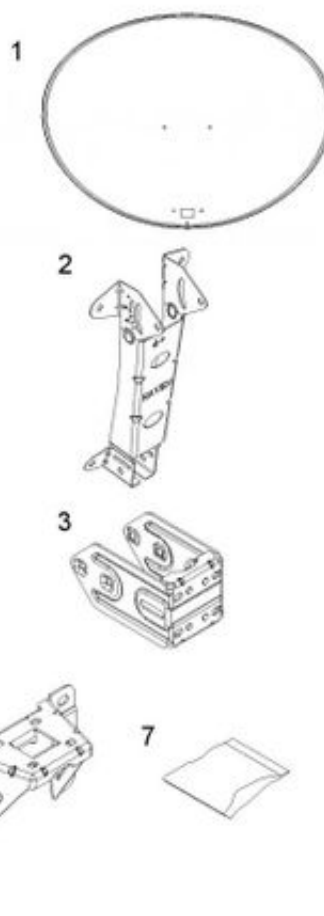


Assembly Instructions

1. Fix Antenna Bracket (2) to Antenna (1) using 4 off M6x12 painted posi pan screws (11) & M6 nuts (10). Leave bottom 2 nuts loose until Feed Leg (4) is secure.



2. Insert Feed Leg (4) into Antenna Bracket (2) through hole in the dish face and secure in place using an M6x40 posi pan screw (13) & an M6 nut (10). Note; tighten bottom 2 nuts on the Antenna.



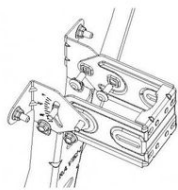


3. Attach Elevation Bracket (3) to Antenna Bracket (2) using 4 off M6x16 cup square screws (12) & M6 nuts (10).

4. Check that the LNB skew setting is appropriate to the area. To adjust where necessary loosen the clamp screw and reset to the correct position before retightening. Angle the front edge of the LNB Clamp so it locates under the return on top of the Feed Leg. Whilst supporting the Feed Leg rotate the Clamp down over the leg ensuring that the location lugs on the Clamp lock securely into place in the cut outs on the bottom of the Feed Leg. Remove the mounting button from the Feed Clamp and push this through the hole on the top surface of the Clamp through into the Feed Leg, ensuring that the button sits firmly on top of the Feed Clamp.

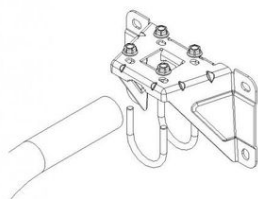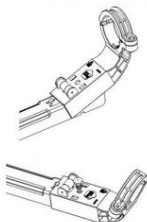

5. Insert L Tube (5) into Wall Mount Bracket (6) & secure using 2 off M6 U Bolts (14) & 4 off M6 nuts (10). If the horizontal angle of the antenna from the wall is between $\pm 55^\circ$ then the short end of the L Tube should be fixed to the wall mount, if the angle is to increase above 55° ($\pm 90^\circ$) then the long end should be fixed to the wall mount.

6. After the Wall mount has been fixed to the wall, clamp the dish assembly to the wall mount assembly using 2 off M6 U Bolts (14) & 4 off M6 nuts (10).

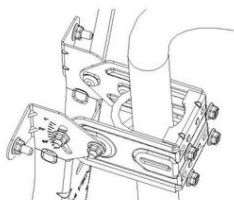

Brak konwertera w zestawie.

Produkt posiada dodatkowe opcje:

Opakowanie anteny: 1