

Link do produktu: <https://cardsplitter.pl/oryginalny-pilot-tv-philips-model-242254990637-czarny-z-klawiatura-p-14592.html>



ORYGINALNY Pilot TV Philips model 242254990637 czarny z klawiaturą

Cena	99,99 zł
Numer katalogowy	242254990637
Kod producenta	242254990637
Model	242254990637
Marka	Philips
Kolor	czarny
Przeznaczenie	TV
Kod producenta	242254990637

Opis produktu

PILOT PHILIPS 242254990637 ORYGINAŁ

Nowy dwustronny oryginalny Pilot Philips 242254990637 obsługujący wiele modeli telewizorów marki Philips. Posiada on klawiaturę QWERTY.

Cechy:

- Typ: Zdalny
- Częstotliwość: 433MHz
- Waga: 0.12KG
- Dwustronny
- Klawiatura QWERTY

OBSŁUGUJE MODELE PHILIPS:

- 40pfl8007
- 40pfl8008s/12
- 42pfl6008h/12
- 42pfl6008k/12
- 42pfl6008s/12
- 42pfl6008s/60
- 42pfl6158k/12
- 42pfl6678k/12
- 42pfl6877t/60
- 42pfl7008k/12
- 46pfl8007
- 46pfl8007k/12
- 46pfl8008s/12
- 46pfl8008s/60
- 46pfl9707
- 47pfl7008k/12
- 55pfl7008k/12
- 55pfl8007k12
- 55pfl8008s/12
- 60pfl9607

-
- The image displays two Philips remote controls side-by-side. The remote on the left is a standard, thicker model with a black finish. It features a large central directional pad with an 'OK' button in the center, surrounded by 'EXIT' and 'OPTIONS' buttons. Above this pad are buttons for 'LIST', 'HOME', 'SMART TV', and 'INFO'. The top section includes playback controls (stop, play/pause, previous, next), 'GUIDE', '3D', and 'AMBI LIGHT' buttons. Below the directional pad are 'CH-' and 'CH+' buttons, a volume rocker, and a row of four colored buttons (red, green, yellow, blue). The bottom section contains numeric buttons (1-9, 0) with second functions like 'ARC', 'DEP', 'GHI', 'JKL', 'MNO', 'PQRS', 'TUV', 'WXYZ', and buttons for 'SUBTITLE' and 'TEXT'. The Philips logo is at the very bottom. The remote on the right is a slim, black model. It features a full QWERTY keyboard at the top, with some keys having secondary functions indicated by small icons. Below the keyboard is a large, dark rectangular touchpad with the 'PHILIPS' logo. At the bottom, there is another set of navigation buttons, including a four-way directional pad and a 'CH+' button.